


Sami[®]

WEARABLE
User Manual
WS-2323

SPEED SMART BAND

Thank you for purchasing the **Sami** wearable WS-2323. Read the instructions carefully to obtain optimum results and preserve it for future reference.

DESCRIPTION OF THE WEARABLE.

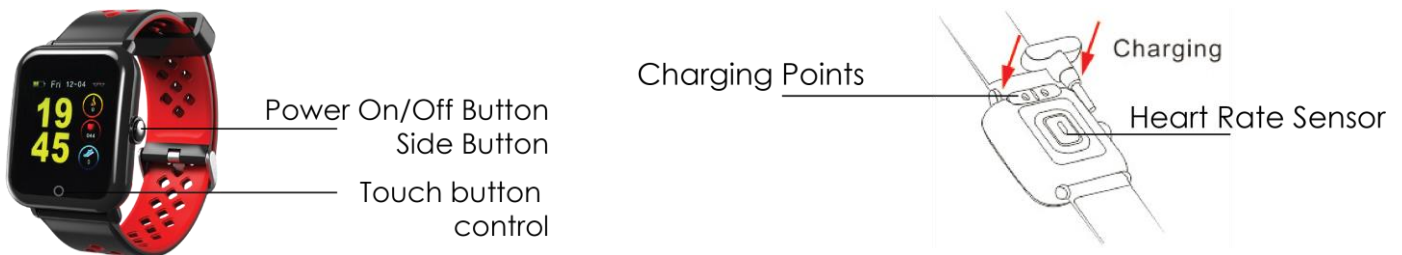


CONTENTS.

Wearable, USB magnetic cable, instruction manual.

CHARGING.

Connect the device to a computer or laptop with the USB Magnetic cable for charging. Put in contact the magnetic end of the usb cable with the charging points positioned in the back of your device. Kindly use only the USB cable included with the wearable. If you use a power adapter for charging, the output of the power adapter should be 5V, 1A. Charging time: 2 hours. Please charge the device fully before using it.

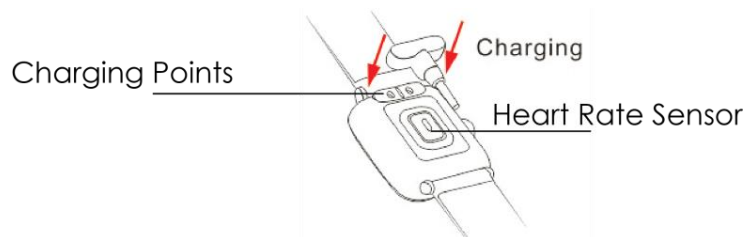

HOW TO POWER ON / POWER OFF?

- 1) To turn ON the smart band, long press the touch button for a few seconds. The touch button is situated on the bottom of the screen. The side button can achieve the same functions.
- 2) To turn OFF the smart band, tap the touch button until you get in the Power-off interface, then long press the touch button and then select YES, and long press the touch button to make it Power off. The side button can achieve the same functions.

HOW TO CONTROL?

- 1) On the display screen, short press the touch button control to change between the different menus. Long press to achieve the different functions. The side button can achieve the same functions.

GETTING STARTED:

- For Android

1) How to obtain the BT Connection APK (**WEARHEALTH**)

Search for the **WEARHEALTH APP** in the Google Play Store; download it and install it in your Android smartphone, or go to our **website www.sami.es** and download the application.

2) Installation of the **WEARHEALTH** APK.

When installing the **WEARHEALTH** application on your Android, you must allow all the Application Permissions, allow this **WEARHEALTH** app auto run.

The first time you run this **WEARHEALTH**, it will ask you to Enable Notifications, please tap OK and tap the **WEARHEALTH** and confirm OK. You must tap OK/Allow for any pop-up request. On your Android permission management, allow all application permissions.

3) How to make the wearable pair with your Android smart phone?

*Firstly, turn on the Bluetooth of your Phone.

*Secondly, run the **WEARHEALTH** app on your Phone, on the home page of **WEARHEALTH**, select "**Mine**", →select "**Connect a device**", the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please select **BAND or WS-2323** (the BT name of this device) to make it pair. The pairing will be finished in few seconds. When you pair for the first time, the app WEARHEALTH will ask you to fill some personal information such as gender/age/height/weight. When you finish select OK/Confirm/Allow for any pop-up request.

Important: To enable all notifications of Call remind, SMS remind, and more reminders of different soft wares such as WhatsApp, Facebook, Skype, Twitter, you will need to turn on the notifications on the APP manually. On the home page of WEARHEALTH, select the icon "**Mine**" (situated on the right bottom of the screen), → and select "**Device management**", → "**more reminders**", and turn on all the APP notifications you want to active.

- For iPhone

1) How to obtain the BT Connection APP? **WEARHEALTH**

On iPhone, please go to APP Store and search **WEARHEALTH** and install the app.

2) How to make the wearable pair with your iPhone?

*Firstly, turn on the Bluetooth of iPhone

*Secondly, run the **WEARHEALTH** app on your Phone, on the home page of **WEARHEALTH**, select "**Mine**", →select "**Connect a device**", the APP will search for new Bluetooth device(s), when the available Bluetooth device displays, please select **BAND or WS-2323** (the BT name of this device) to make it pair. The pairing will be finished in few seconds. When you pair for the first time, the app WEARHEALTH will ask you to fill some personal information such as gender/age/height/weight. When you finish select OK/Confirm/Allow for any pop-up request.

* Now you can start using your desired functions of the smart band.

Important: To enable all notifications of Call remind, SMS remind, and more reminders of different softwares such as WhatsApp, Facebook, Skype, Twitter, you will need to turn on the notifications on the APP manually. On the home page of WEARHEALTH, select the icon "**Mine**" (situated on the right bottom of the screen), → and select "**Device management**", → "**more reminders**", and turn on all the APP notifications you want to active.

PRODUCT FEATURES

BLUETOOTH (V 4.0)

TOUCH BUTTON

TOUCH SCREEN. Capacitive touch screen 1.3"


BUILT IN VIBRATING MOTOR

BUILD IN HEART RATE SENSOR

BUILD IN GRAVITY SENSOR

GESTURE CONTROL TO LIGHT UP THE DISPLAY SCREEN

DISPLAY SCREEN INTERFACE

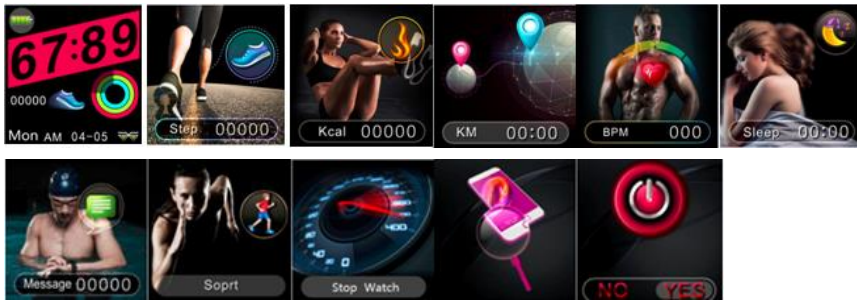

- 1) Time/Date/Battery
- 2) Steps (Pedometer)
- 3) Calories (Pedometer)
- 4) Distance (Pedometer)
- 5) Heart rate monitor
- 6) Sleep monitor
- 7) Messages
- 8) Sport Mode – sport modes including Running /Walking /Climbing /Riding
- 9) Stopwatch
- 10) Find my phone
- 11) Power off

Data can be sync from the wearable to the smart phone on the **WEARHEALTH** APK/APP.
Your smart phone will be synchronized when the Bluetooth is paired with this device.

FUNCTIONS

PHONE CALL NOTIFICATION - vibrating reminder for incoming phone calls. This function need to be turned on manually at the **WEARHEALTH** APK/APP.

MESSAGE NOTIFICATION - vibrating reminder for incoming messages, including SMS, WhatsApp, Facebook, Twitter, Skype messages, etc. This function need to be turned on manually at the **WEARHEALTH** APK/APP.

CLOCK SCREENS (Different home digital clocks) - In the home screen of the smart band, long press the fixed-point for a few seconds to change the style of the digital clock.

SLEEP MONITOR - builded-in

ALARM CLOCK - supported on the **WEARHEALTH** APK/APP

FIND THE DEVICE - find my smart band

PHOTOGRAPH - (remote control your smartphone's camera)

STOPWATCH

SEDENTARY REMIDER(REMIND TO MOVE) - supported on the **WEARHEALTH** APK/APP

METTING REMIDER - supported on the **WEARHEALTH** APK/APP

DRINK REMIDER - supported on the **WEARHEALTH** APK/AP

GESTURE CONTROL (Raise your hand to light up the screen)

GPS MAP TRACE (view it on the BT APP/APK **WEARHEALTH**) On the home page of the **WEARHEALTH**, tap in the **Sport** icon to view the GPS map. On the home page of the **WEARHEALTH**, tap in the **Sport** icon, then select the icon situated in the right top to view the GPS map trace history record.

MULTIPLE LANGUAGES

TECHNICAL SPECIFICATIONS:

Display screen: Fixed-point capacitive touch screen 1.3".

Screen resolution: 240x240 pixels.

Internal Memory: RAM 64KB, ROM 512KB+64Mbit

System: Nucleus

CPU: NRF52832

Charge I/O port: USB magnetic charging cable

Battery: Built in Li-Polymer 320 mAh

Stand by time: 15~20 DAYS

Working time: 5 DAYS

Bluetooth: 4.0.

Water-resist Rating: IP67 (this device resists raindrops, it's not water proof)

Weight: 40 g

Exterior Dimensions: 43*37*13mm (straps not included). And the length of straps 123mm+88mm

Declaration of Conformity

Hereby we,

Name of manufacturer: SANTOSHI SL
Address: CALLE FELIPE ASENJO N.56
Zip code & City: 28947 - FUENLABRADA (MADRID)
Country: SPAIN

declare that this DoC is issued under our sole responsibility and that this product:

Product description: Smart Band
Type designation(s): WS-2323
Trademark: SAMI WEARABLE

is in conformity with the relevant Union harmonization legislation:

DIRECTIVE EMC 2014/30/EU
DIRECTIVE LVD 2014/35/EU

Standard CE (RED): DIRECTIVE 2014/53/EU
Standard RoHS: 2011/65/EU: (RoHS) Restriction of Hazardous Substance.

with reference to the following standards applied:

EN 60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 62479:2010
EN 301 489-1 V2.1.1 (2017-02)
EN 301 489-17 V3.1.1 (2017-02)
EN 300 328 V2.1.1 (2016-11)



Signature

Full name: VISHAL MIRPURI

Position: ADMINISTRATOR

Date: 15 / 04 / 2019